




Free Standing Tub Installation Instructions

Suggested Tools





Inner Tub




Outer Tub

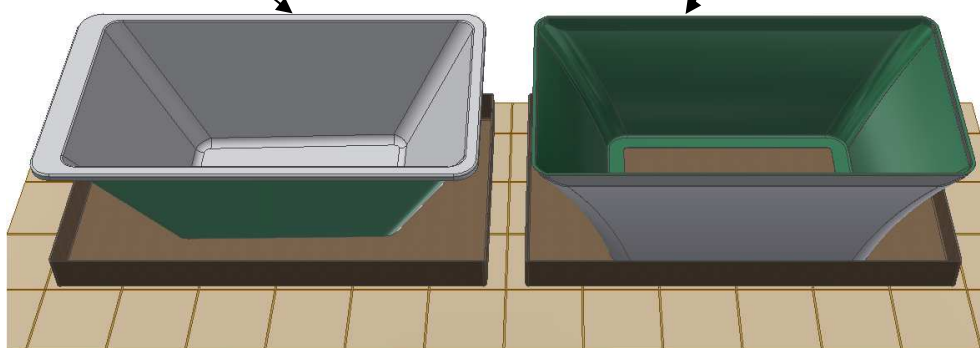


Unbox Tub. Separate the Inner and Outer Tubs and place them on the lids or blankets to prevent any scratches on the surface.

Place Outer Tub on the flooring and position where you want it located. Take a pencil and mark around the inside cutout. Also mark the drain the plumbing location of the notch to be taken out of the tub bottom. Note that a larger cutout will probably need to be removed from the flooring to accommodate the plumbing.

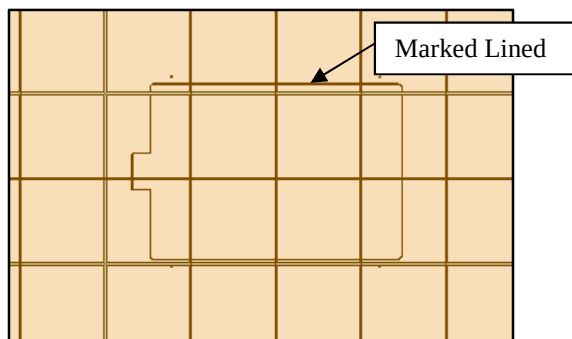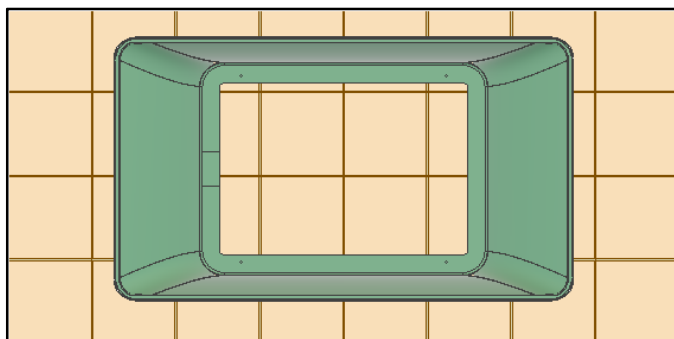

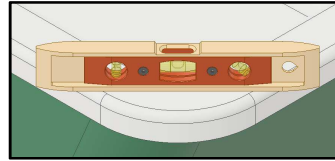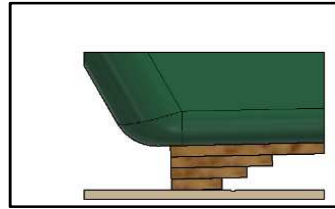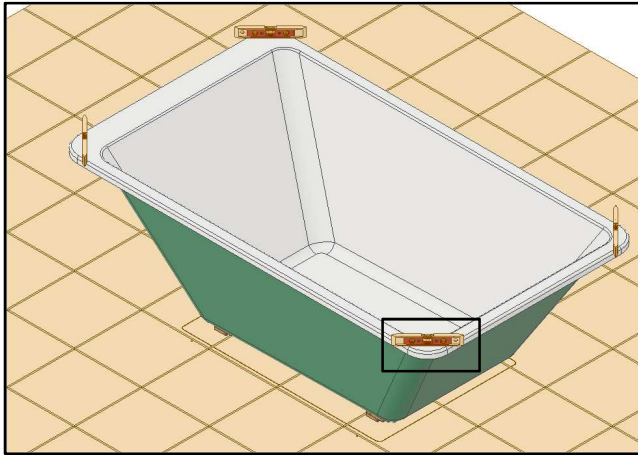



Remove Outer Tub and place Inner Tub in correct location according to the marks on the floor. Check level in all 4 corners and shim if necessary.

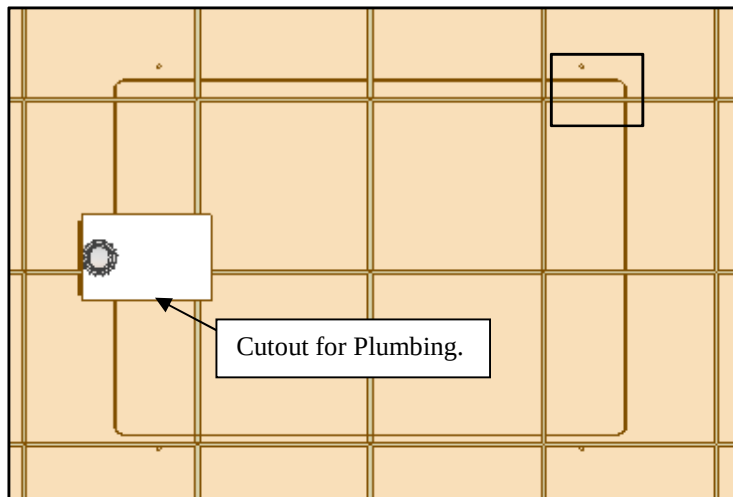

Cutout for Plumbing.


Remove Inner Tub and cut out flooring for plumbing clearance. If top flooring is tile, pre-drill (4) corner holes for screws to anchor


4 Corner Holes to Anchor Tub

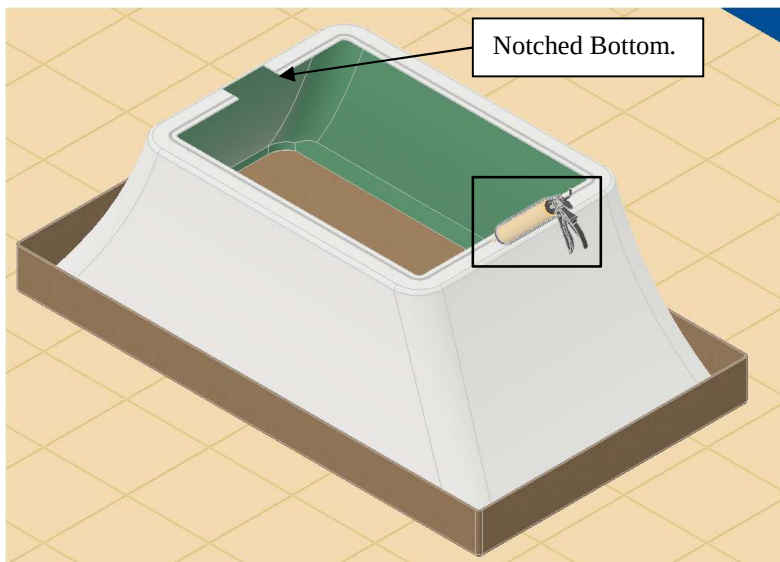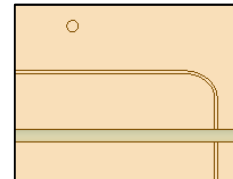




Notched Bottom.

Cut notch in Outer Tub bottom for drain clearance. Run a bead of silicone caulk around the perimeter of tub bottom.


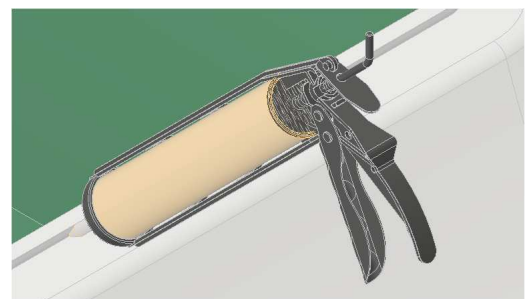


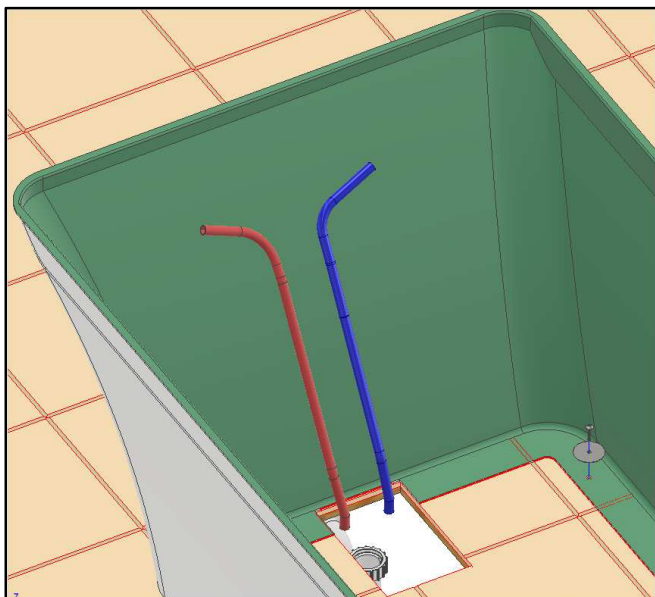


Place Outer Tub with Silicone in place, making sure water lines are “inside” as shown for a deck mount faucet. Attach screws and washers in (4) corners.

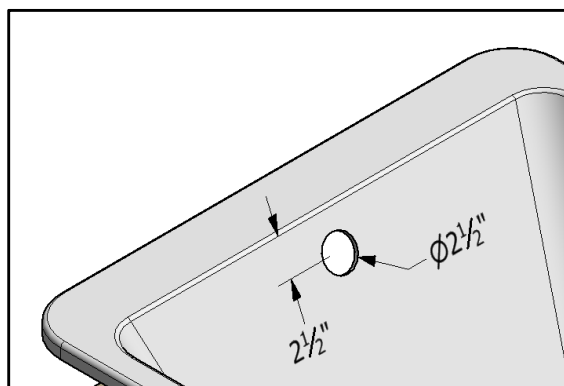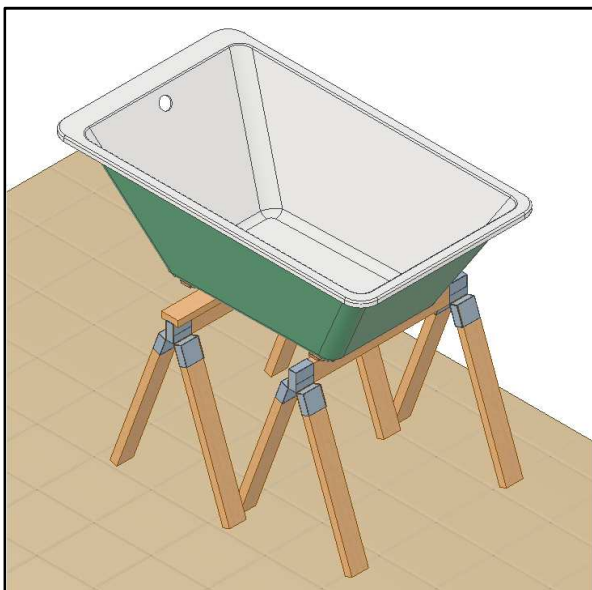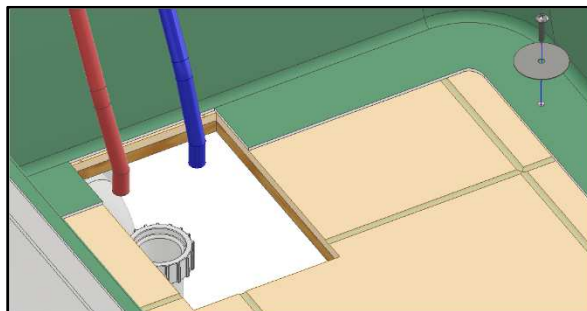


Place Inner Tub on sawhorses. If using a standard overflow, drill a 2 ½” diameter hole, centered on end and 2 ½” down from top as shown.

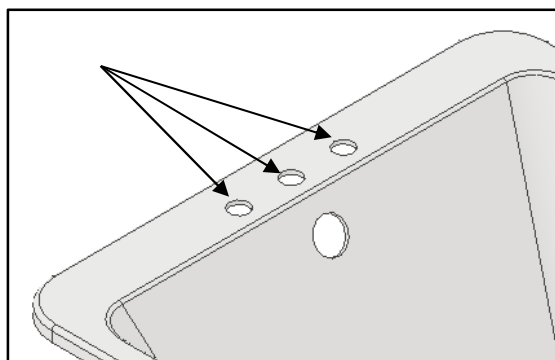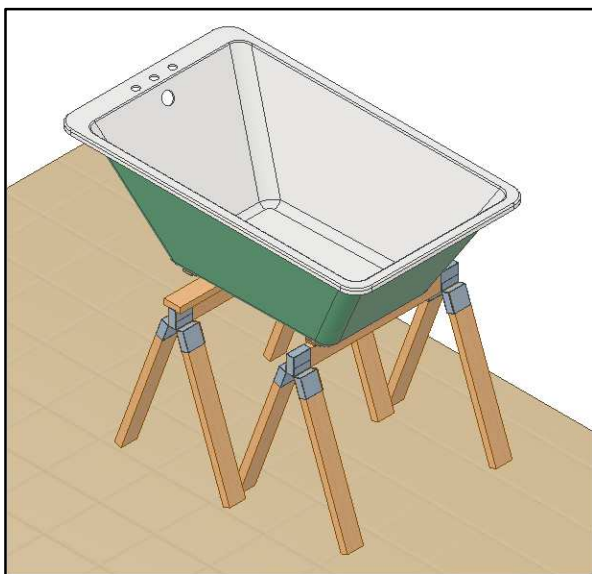

Mark tub rim for faucet location. Cut holes as per manufacturer’s instructions. If using a standalone bath fixture skip this step.

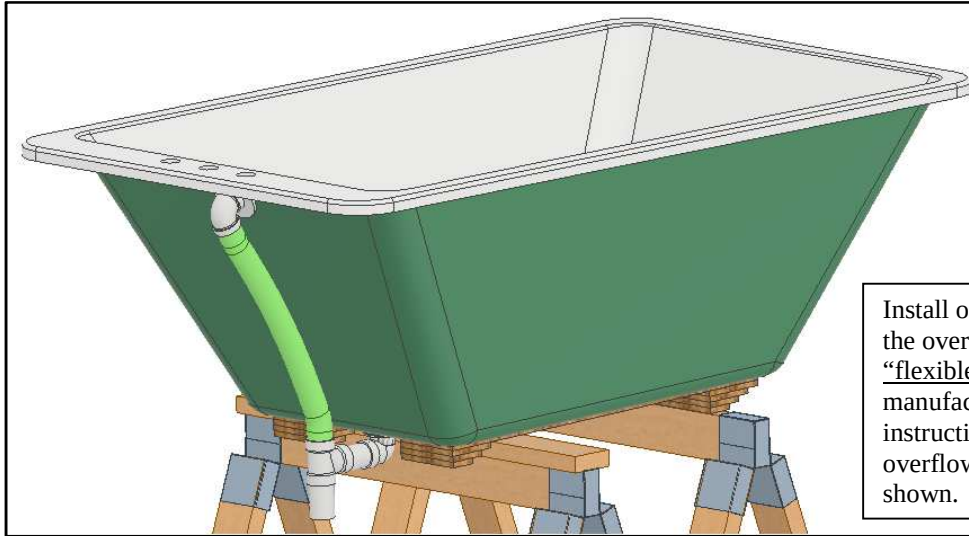

Install overflow and drain. Connect the overflow and drain with the “flexible” tubing. Refer to the manufacturer’s installation instructions as your drain and overflow may differ from what’s shown.

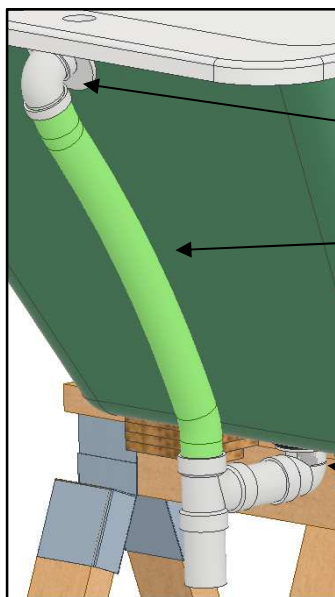



Overflow Connection

“Flexible” Tubing


Drain Connection

Overflow Cover


Drain

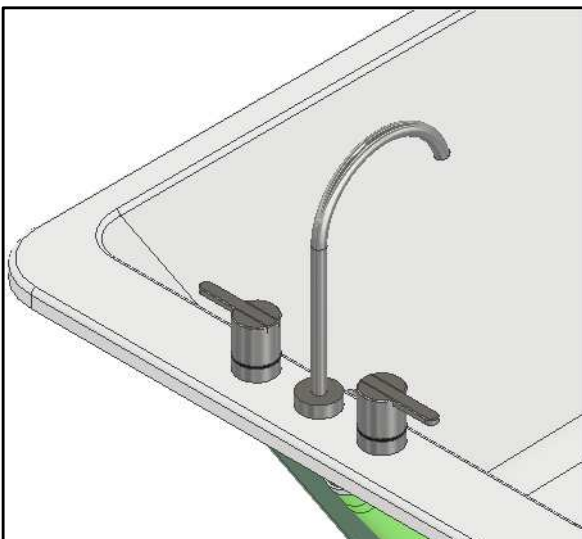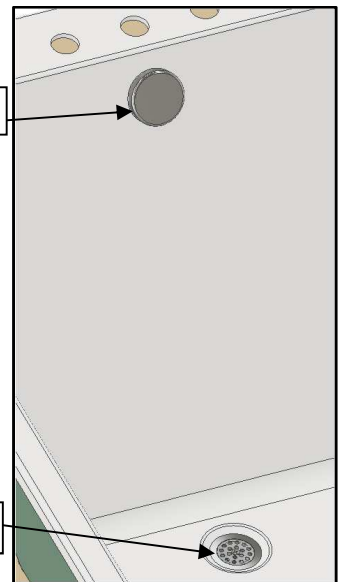



If using deck mount faucet, install faucet and deck hardware as per manufacturer’s installation instructions.

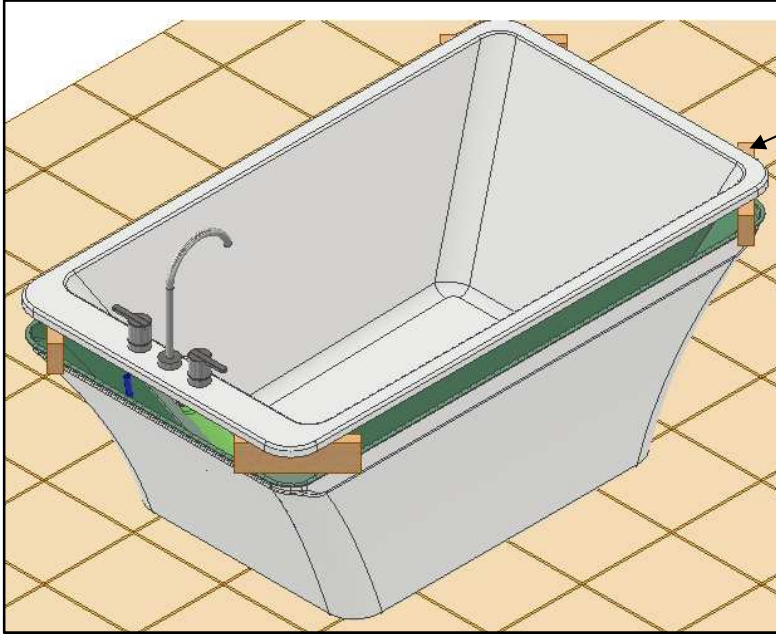


Set 2 x 4's on each corner of the Outer Tub. Lift Inner Tub up and carefully lower in place, resting on 2 x 4's.

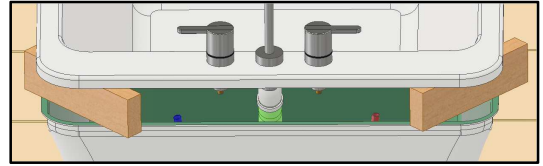

Hook up water lines and check for leaks. If there are no leaks, remove 2 x 4's and lower in place.

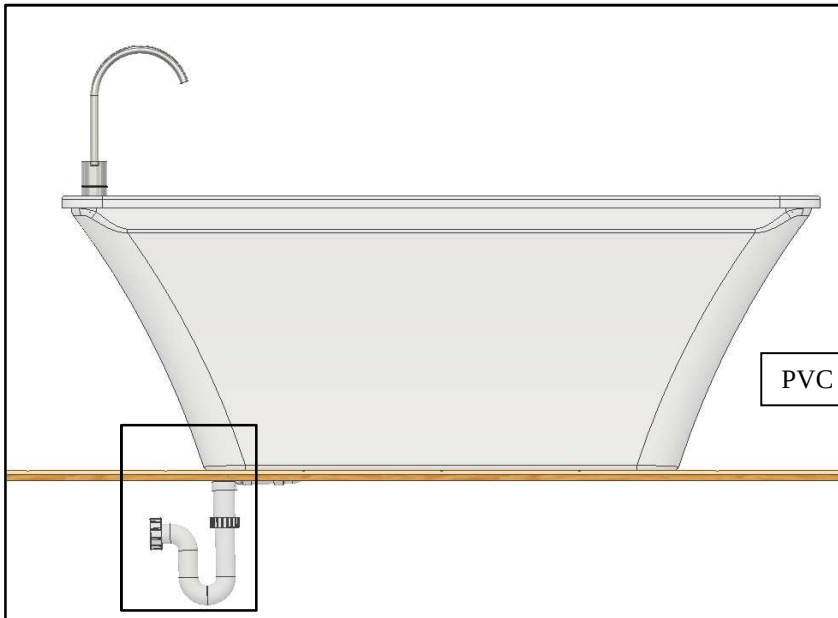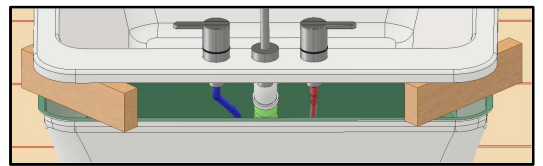

Line up PVC tube with P-Trap, insert and tighten connection.

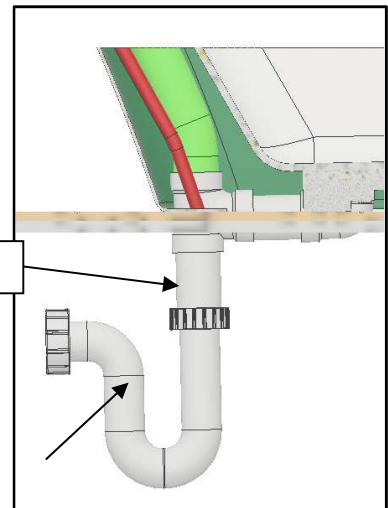

PVC Tube

P-Trap